
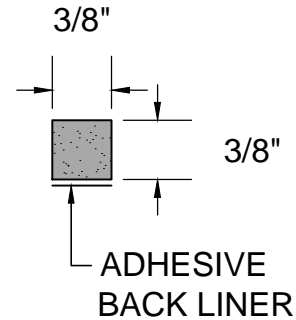


RAY-BAR X-RAY GLAZING TAPE

FOR USE WITH ALL X-RAY GLASS AND X-RAY IGU PRODUCTS

RAY-BAR PROPRIETARY X-RAY GLAZING TAPE 3/8" X 3/8" GREY OPEN CELL FOAM TAPE RECOMMENDED FOR USE IN ALL RAY-BAR X-RAY GLASS INSTALLATIONS

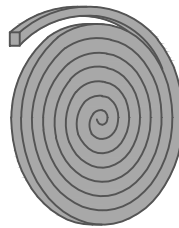

- ☸ PROVIDES SOFT CUSHION AND SUPPORT OF X-RAY GLASS INSTALLATION
- ☸ NOT AFFECTED BY IONIZING X-RAY GAMMA RADIATION EXPOSURE
- ☸ ADHESIVE BACKED "PEEL AND STICK" EASY INSTALLATION
- ☸ RECOMMENDED FOR ALL RAY-BAR X-RAY GLASS APPLICATIONS

- Ray-Bar X-Ray Glass Glazing Tape is 3/8" x 3/8" (0.375" x 0.375") and available in 25' 0" (300") length rolls. This proprietary Ray-Bar product is adhesive-backed for ease of installation in hollow metal frames and removable stops.
- Unlike other glazing tapes, X-Ray Glass Glazing Tape is chemically neutral, stable and non-reactive, and will not break down or deteriorate when exposed to high levels of ionizing x-ray gamma radiation.
- Ray-Bar X-Ray Glazing Tape is safe for all levels and types of X-Ray Protective Glass compositions.
- This glazing product has been safely utilized on literally 1000's of x-ray glass installation in shielding projects nationwide.
- This soft compressive tape provides even cushioned support around the perimeter of the fragile x-ray glass, metal frame, and removable stop assembly reducing chances of egg-shelling or glass fracturing.
- This product is strongly recommended for all X-Ray Glass or X-Ray Insulated Glass Units (IGU) installations into shielded frames.
- This product is only sold together with genuine Ray-Bar X-Ray Glass purchases.
 - * This Ray-Bar specialty glazing tape is Not sold separately. No exceptions.

Important Note: X-ray glass should never be installed without glazing tape, or "pinched" directly against metal surfaces which may potentially cause fragile glass breakage, glass fractures or runs, chipping and perimeter edge "egg-shelling" risks.

Terms of Use: Certain designs and concepts are the exclusive proprietary property and work product of Ray-Bar Engineering provided in good faith as a courtesy for the architectural design of projects specifying, incorporating and utilizing genuine Ray-Bar products and assemblies. Ray-Bar designs are not to be copied, altered, plagiarized or utilized in any competitive or detrimental manner against Ray-Bar as protected by law and/or copyrights. "All Rights Reserved"



JOB NAME:	
LOCATION:	
ROOM NUMBER:	
SHEET ____ OF ____:	

RAY-BAR X-RAY GLAZING TAPE TECH DATA

RAY-BAR ENGINEERING CORP.

Toll Free: 1(800) 444-XRAY / 1(800) 444-9729
 Telephone: (626) 969-1818
 24 Hour Fax: 1(800) 333-XRAY /
 1(800) 333-9729

WWW.RAYBAR.COM

RAY-BAR
X-RAY
GLAZING
TAPE